



3-088-944-02 (1)

Analog controller for PSX (DUALSHOCK 2)

instruction manual

Thank you for your purchase. Failure to observe

safety precautions with electrical products may result in fire or personal injury.

This instruction manual shows important precautions and how to **handle** the product to prevent accidents. **Please read this instruction manual carefully and** use the product safely. After reading, be sure to keep it in a place where you can refer to it at any time.

This analog controller is for PSX only.

DESR-10

© 2003 Sony Corporation Printed in China

警告 For your safety

Sony products are designed with safety in mind. However, improper use of electrical products may result in personal injury due to fire, electric shock, etc. Be sure to observe the following to prevent accidents.

Follow safety precautions

Please read the notes carefully. Contains general product precautions.

If the product malfunctions

notice any malfunction or damage, immediately contact the retailer where you purchased the product or a Sony service center for repairs.

• If there is an unusual sound or smell • If water or foreign matter enters • If the product is dropped or damaged

shop or contact a Sony service representative for repair.

Meaning of warning indications The following indications are used in the instruction manual. Be sure to fully understand the content of the display before reading the text.

<p> 警告</p> <p>Failure to observe the precautions indicated by this symbol may result in death or serious injury due to fire, electric shock, etc.</p>	<p>attention symbol</p> <p>Prohibited symbol</p>
--	--

If you do not follow the precautions indicated by this sign, you may be injured by an electric shock or other accident, or damage to nearby household goods may occur.

注意 Failure to observe the following cautions may result in injury or damage to surrounding items.

Do not place the product in places where there is a lot of oily smoke, steam, humidity or dust. Placing the product in locations such as those described above may cause malfunctions. Using the product in an environment other than the usage conditions described in the instruction manual may cause a malfunction.

Do not allow water or foreign objects to enter the product. Water or foreign objects may cause malfunction. In the unlikely event that water or other foreign objects have entered the camera, please contact the store of purchase or a Sony service center. If you connect to PSX as it is, It may cause the PSX to malfunction.

For inspection and repair of the internal parts that cannot be opened, contact the retailer where you purchased the product or a Sony service center.

Also be aware of the following:

- Do not place the PSX in an unstable location
- Place out of reach of children
- Arrange the PSX console and cords correctly
- Do not leave the PSX console on the floor control

dual shock two
Do not leave the DUALSHOCK 2 on top of the PSX or on a desk. analog controller by progression dual shock two (DUALSHOCK 2) may vibrate and fall, resulting in injury or malfunction. When not in use, turn off the power with the I/1 (power) switch on the PSX itself, or use the analog controller DualShock Tool. (DUALSHOCK 2) from the PSX main unit.

Health precautions

- Stop using the machine immediately if your hands or arms get tired, or if you feel any discomfort or pain. If it doesn't get better after a while, see a doctor.
- Do not place the unit on your head, elbows, knees, or other bony parts of your body, such as your face or abdomen.
- Never use the vibration function if you have bone or joint disease.
- Never use the vibration function if you have a broken finger, hand, wrist, or arm, or if you have a dislocation, strained muscle, or sprain. Vibration may exacerbate symptoms.
- Do not play with this unit continuously for a long time. As a guideline, take a break every 30 minutes.

Warranty and after-sales service

Warranty

- This product has a warranty printed on the backing.

After filling in the prescribed items and checking the content, please keep it in a safe place. • The warranty period is one year from the date of purchase.

After-sales service If something goes wrong, first check the instruction manual and check again. If the symptoms do not improve, please contact the Customer Service Center. When consulting with us, please let us know the following:

- Model name: DESR-10
- Symptom of failure: as detailed as possible
- Date of purchase:

Repairs during the warranty period will be performed based on the contents of the warranty. Please see the warranty for details.

After the warranty period has expired, if the function can be maintained by repair, we will repair it for a fee upon your request.

Retention period of parts We retain repair performance parts (parts necessary to maintain the functionality of the product) for the PSX-dedicated analog controller (DUAL SHOCK 2) for 8 years after production is discontinued. This parts retention period is the period during which repairs are possible. Even after the holding period has passed, it may still be possible to repair depending on the part of the problem.

Main Specifications

Connector	Controller terminal
code	Approx. 4 m 5°C to
Operating	35°C Approx. 156.5 x
temperature Dimensions	92.1 x 62.7 mm (width/height/depth)
	Approx. 280 g

Please note that specifications and appearance are subject to change without notice for improvement.

“PlayStation”, “DUALSHOCK” and “PSX” are registered trademarks of Sony Computer Entertainment Inc.

“SONY” is a registered trademark of Sony Corporation.

● <http://www.sony.co.jp/SonyDrive/>

お客様ご相談センター

● ナビダイヤル 0570-00-3311
(全国どこからでも市内通話料でご利用いただけます)

● 携帯電話・PHSでのご利用は 03-5448-3311
(ナビダイヤルがご利用できない場合はこちらをご利用ください)

● FAX 0466-31-2595

受付時間 : 月~金 9:00~20:00 土・日・祝日 9:00~17:00
お電話は自動音声応答にてお受けしています。

ソニー株式会社 〒141-0001 東京都品川区北品川 6-7-35

Precautions for use

Use and storage location

Do not use or store in places with high humidity, high temperatures, violent vibrations, or in direct sunlight. Also, please be aware of the following: • Do not let it get wet. • Do not place heavy objects on the product. • Never disassemble or modify the product. • Do not twist or pull the cord.

- Do not throw, drop, or apply strong impact to the product. please.
- Do not touch the terminals directly with your hands or put foreign objects into them. please.

About maintenance

Please use a dry soft cloth.

Condensation


Avoid sudden temperature changes. Do not use immediately after moving from a cold place to a warm place or raising the room temperature suddenly. Condensation may have formed inside.

If an abnormality or malfunction occurs

In the unlikely event that an abnormality or malfunction occurs, or if a foreign object has entered the product, please contact the store of purchase or our service center for repair.

Connect to PSX

Firmly insert the analog controller connector into the controller connector on the PSX main unit with the arrow facing up.

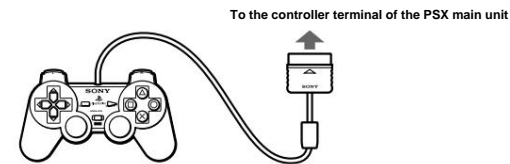

analog controller dual shock TWO

DUALSHOCK 2y

analog controller dualshock


Two

Using (DUALSHOCK 2)

When operating PSX

You can operate with the following buttons.

- Arrow keys (up, down, left, right), home button, play button, option button, enter button, back button, view button, . button, > button, m button, M button

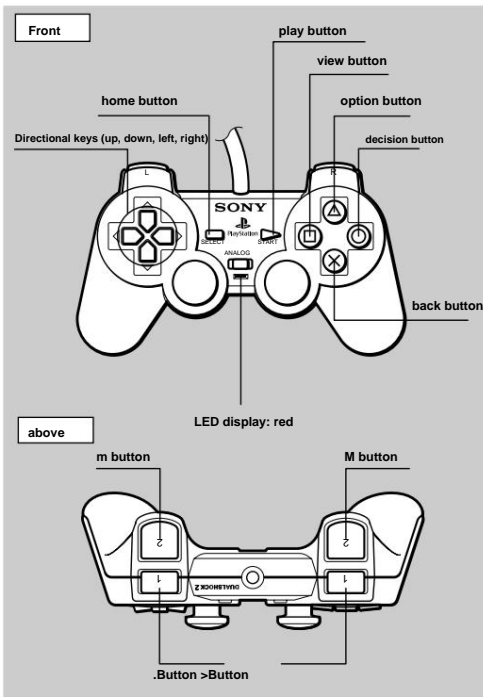

When you enjoy games on PSX

- Enjoy analog mode and digital mode

I can. When analog mode is selected, analog operations can be performed with the following buttons.

PlayStation 2 standard software:

- Directional keys (up, down, left, right), button, button, button, left stick, right stick, X button, R1 button, L2 button, R2 button PlayStation standard software: left stick, right stick • You can enjoy the vibration function.


to come.

please note

The buttons that can be operated analogously differ depending on the software. For details, refer to the instruction manual of each software.

switch mode
analog


The mode changes each time the ANALOG mode switch is pressed. In analog mode, the LED display lights red. Please switch to the mode supported by each software.

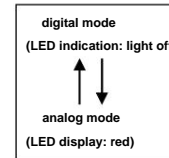


Note

Depending on the software, pressing the ANALOG mode switch may not change the mode. There are also some that automatically switch modes. For details, refer to the instruction manual of each software.

Analog mode (LED display: red)

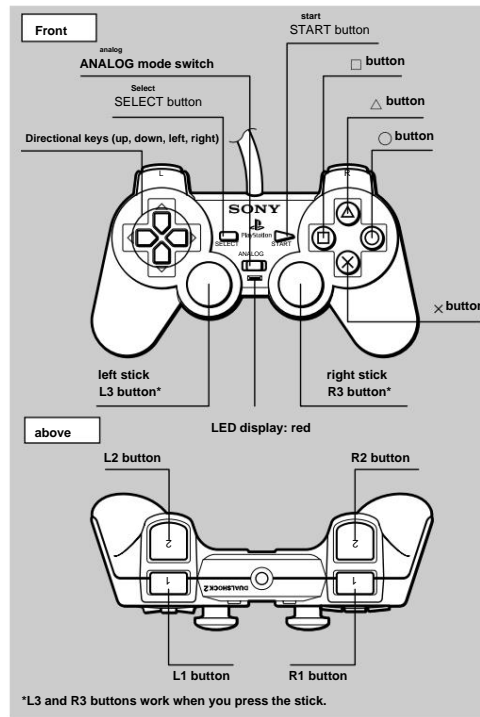


Digital mode (LED display: off)

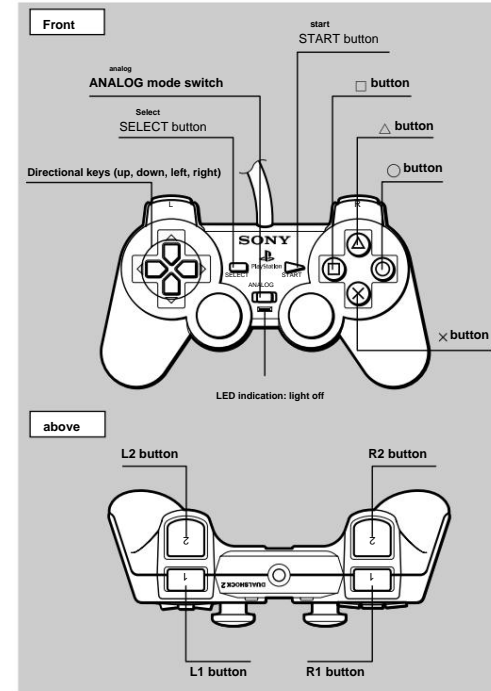

please note

To start the game, turn on the power and move the right and left sticks in large circular motions. (Refer to the figure below) Do not twist the stick part.

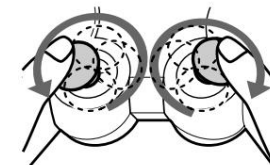

About the vibration function This unit is a sensory controller with a vibration function. ON/OFF of the vibration function can be operated on the software screen. For details, refer to the software instruction manual. Even if there is no explanation about the vibration function in the instruction manual, there is software that automatically activates the vibration function.

please note

- Read "Health Precautions" before using the vibration function. Please read carefully. • When not in use, turn off the power of the PSX main unit or remove this unit from the PSX main unit.