



“PSX” Update Manual Ver.1.31

©2004 Sony Corporation

## Please be sure to read it

Precautions when updating .....	6
About "PSX" Certification.....	6
Precautions when handling CD-ROMs .....	6
About the time it takes to display thumbnails of photos .....	7

## DESR-5000/ 7000 updates

Update contents of Ver.1.31.....	8
Update contents of Ver.1.20.....	9
Update contents of Ver.1.10.....	Ten

## DESR-5100/ 7100 updates

Update contents of Ver.1.31.....	11
----------------------------------	----

## to update

Updating (updating) over the network .....	12
Flow of network update .....	12
Updating (updating) with a CD-ROM .....	14
Flow of CD-ROM update .....	15
Checking if the unit has been updated .....	17

## Operating instructions for functions added in Ver.1.31

Setting chapter marks .....	18
Canceling Chapter Marks .....	18
To cancel all set chapter marks .....	19
Precautions for "Setting Chapter Marks" .....	19
Optimizing the image .....	19
Precautions for "Optimize Image" .....	21
Dubbing to DVD .....	21
Types of discs that can be dubbed with this unit .....	21
Video length that can be recorded on DVD .....	21
When dubbing to DVD-RW in VR mode .....	21
Flow of Dubbing Wizard .....	22
Step 1 Prepare the disc .....	22
Step 2 Select the video (title) to dub .....	24
Step 3 Selecting a DVD menu design .....	25
Step 4 Check the order in which the titles are written .....	26
Step 5 Create a DVD menu .....	26
Step 6 Dubbing to DVD .....	26
Notes on "Dubbing to DVD" .....	26
Formatting a DVD .....	27

	Setting the dubbing method when dubbing edited video to DVD-RW in VR mode .....28
	Setting the audio recording method when dubbing recorded video of bilingual broadcasts to DVD .....28
	Recorded audio when dubbing recorded video of bilingual broadcasts to DVD.....28
	Switching the visualizer to a still image .....29
	About "PlayStation®BB".....30
	Enjoying "PlayStation®BB".....30
	Browsing "PlayStation®BB" Info.....30
	Precautions when using "PlayStation®BB".....30
<hr/>	
<b>Operating</b>	Changing the contents of recording reservations in the program guide .....31
<b>instructions for</b>	Canceling a recording reservation from the program guide .....32
<b>functions added in Ver 1.20</b>	Dubbing with DVD+RW .....32
	Fast-forwarding video with sound (fast playback) 33
	Playing back movies and clip motions shot with a Sony digital still camera .....33
	Operating the video being played .....34
	Importing movies and clip motions shot with a Sony digital still camera .....35
	Importing by Folder .....35
	Importing in File Units .....35
	Playing back photos and videos saved on a CD-R .....36
	Recording bilingual broadcasts (dual audio broadcasts) .....36
	Recording main or sub audio only .....36
	Recording both main and sub audio .....36
	Recording a bilingual broadcast from an external input .....36
	Precautions when listening to the audio of recorded video of bilingual broadcasts through the optical digital output.....37
	Precautions when recording dual audio programs (digital CS broadcast programs, etc.) from the external input (LINE).....37
<hr/>	
<b>Operating</b>	Changing the order of the images .....38
<b>instructions for</b>	Skipping the video to the next scene (flash) ..... 38
<b>functions added in Ver 1.10</b>	Using the flash with the L2/R2 button on the remote control 38
	Playing MP3 songs .....39
	Importing MP3 songs into this unit .....40
	Importing the entire folder .....40
	Importing MP3 files (songs) from a CD-R .....40
	Connecting a keyboard to enter characters..... 40

- Setting the keyboard .....41
  - Setting the keyboard type .....41
  - Setting the character input start time when the key is pressed for a long time ..... 41
  - Setting the character input speed when a key is pressed for a long time .....41
- Setting character input .....42
  - Setting the Japanese input method .....42
  - Setting Key Binds .....42

## others

---

- How to save files to a CD-R .....43
- Discs that can be dubbed with video .....45
- How to save still pictures and video files to a “Memory Stick” ....46
- Software License Agreement .....47
- Trademarks.....48
- Glossary.....49
- index.....50
- Inquiries for updates .....Back cover



# Please be sure to read it

Thank you for purchasing the DESR-5000/7000/5100/7100. This instruction manual is for software update only for DESR-5000/7000/5100/7100. Please be sure to read the following notes before updating.

## Precautions when updating

- When updating, refer to "Updating" (page 12) page).
- If there is a scheduled recording within 1-2 hours of the update starting , Please make sure it is not
- If recording reservation starts during update, recording will stop.
- Do not update while the unit is recording as the software will not be updated properly.

## About "PSX" certification

"PSX" is "DNAS"(Dynamic Network Authentication System), Sony Computer Entertainment Inc.'s proprietary software that enables copyright and security protection. I am using an authentication system. Deactivator for this system or transfer, hand over, exhibit, export the program, Importing or transmitting is prohibited by law. In addition, content compatible with "DNAS" can be used on other "PSX" or It cannot be used on "PlayStation 2".

## Precautions when handling CD-ROMs

- Hold the CD-ROM without touching the playing surface.



Do not place in direct sunlight, high temperature, or high humidity. Please do not place.

- Store in a case.
- Fingerprints and dirt on the CD-ROM can cause read errors. Please keep it clean at all times.
- Wipe gently with a soft cloth from the center of the CD-ROM to the outside. If it is very dirty, wipe it with a soft cloth slightly moistened with water, and then wipe off the moisture with a dry cloth.

Do not use benzene, record cleaners, anti-static agents, etc. Do not use this as it may damage the CD-ROM.

stomach.



## About the time it takes to display thumbnails of photos


When there are many photos (files) in GIF format, thumbnails  
It may take a very long time to appear, but this

This is not a machine malfunction. Thumbnails are displayed with reference to the following guidelines.

Please wait for a while. show thumbnails



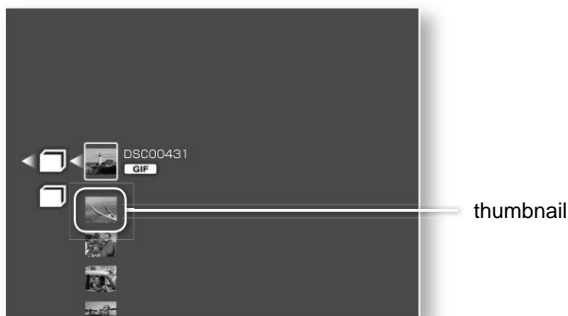

Turning off the power while

So please be careful.



Estimated time until GIF format photos are displayed

(Reference for displaying thumbnails of 200 photos on the screen is)

	("Memory Stick") or about 2 to 3 minutes	
	(digital camera)	
	(CD-R)	takes about 1 minute
	(album)	takes about 1 minute

### About the time it takes to finish importing photos

When importing photos, depending on the number of files to import,  
It may take a long time\*, but this is not a malfunction of the machine.  
not.

Turning off the power while importing photos may cause malfunction.

Please note that there are

\* Importing 200 photos at once may take more than 30 minutes.

### Notes on displaying photos

Some Sony digital still cameras "Cyber-shot"

has a text mode for shooting text in black and white. This machine

You can display or import GIF files shot in this mode.

cannot be entered. This unit is an animated GIF

Compatible with

# Update contents of DESR-5000/7000

If you update (renew) this software, it will be Ver.1.31. Before performing this update, Ver.1.10 or For customers who have not updated Ver.1.20, this update will update items from Ver.1.10 to Ver.1.31 at once. will be

## Update contents of Ver.1.31



Supports changing the program name when making a time reservation or recording reservation on the program guide



Addition of chapter mark setting function for video recorded with this unit (page 18)  
Supports additional recording on DVD+RW and DVD-RW (page 23) Supports recording mode changes for video recorded with this unit (optimization) (page 19) Supports DVD menu creation for dubbing (page 25) Disc options Added initialization function to (page 27)  
You can now initialize DVD-RW and DVD+RW from the disc options.



Added still image type visualizer (page 29)



Compatible with "PlayStation@BB" (page view: viewing functions for various channels only) (page 30)

Added "Dubbing to VR mode" to **other** settings Added "DVD bilingual recording audio" to settings



## Update contents of Ver.1.20



Support for changing/cancelling recording reservations on the program guide (page 31)



Supports dubbing and playback of video using DVD+RW (+VR mode) (page 32)

Supports 30x fast forward and fast rewind (search) of commercially available DVD software (DVD-ROM)

Supports fast playback of video (1.3x speed) (page 33)



Supports playback of movies (MPEG1 format) and clip motion (GIF format) shot with Sony digital still cameras (page 33) Supports importing movies and clip motion shot with Sony digital still cameras (page 35)

Supports display and import of photos saved in GIF format (Sony digital still cameras only)

GIF format photos taken with a digital camera can be displayed on this unit or imported. The operation method is the same as for photos in JPEG format. For details, refer to page 54 of the instruction manual that comes with the "PSX".

For notes on display, see "Notes on playback on this unit" (page 33).

Supports playback and import of photos and videos saved on CD-R (page 36)



The number of recognizable songs on discs (CD-R) of MP3 format songs has been improved to 99 songs/folder.



Supports selection of [main + secondary audio] in the "HDD dual language recording audio"

setting (page 36) When [main + secondary audio] is selected, both main and secondary audio can be recorded and played. You can switch between main and sub audio at any time. Videos recorded with the [Main + Sub Audio] setting can be dubbed in DVD-RW VR mode.

"External video input" moved from TV to video settings

### Other fixes that stop in the middle during slideshow playback

It does not support "Voice memo" that can be recorded by some models of Sony's digital still camera "Cyber-shot".

# Update contents of DESR-5000/7000

## Update contents of Ver.1.10



Supports re-extending setting during extended recording



Change the order of recorded videos (page 38)

Skip (return) the image to a slightly earlier scene (page 38)

Supports 30x speed for fast-forward and fast-reverse (search) In addition to 2x, 10x, and 120x, 30x search is now available.

For details on searching, refer to page 42 of the instruction manual that comes with the "PSX" unit.

Reduced dubbing time

The writing speed to DVD has increased from 12x to 24x, making dubbing faster than ever before.



Playing MP3 format songs recorded on a CD-R (page 39)

Importing MP3 format songs recorded on a CD-R to the hard disk (page 40)



Displaying and importing photos saved in TIFF format (Sony digital still cameras only) You can display and import TIFF format photos taken with a digital camera on this unit. The operation method is the same as for JPEG format photos. For details, refer to page 54 of the instruction manual that comes with the "PSX" .

**Supports** character input using a "PlayStation 2" compatible keyboard (USB connection) (page 40) Added "Character

input settings" to the settings

Added "Keyboard Settings" to Settings

Added "L2/R2 button settings" to "Video settings" (page 38)

Correction of the point that dubbing cannot be performed depending on the externally connected device.

Correction of the point that the channel setting of Just Clock changes to the initial value when automatic channel setting is executed.

Correction of noise that occasionally occurs when paused while editing video recorded on the HDD when optical digital out (SPDIF) is connected.

# Update contents of DESR-5100/7100

## Update contents of Ver.1.31

Update contents from Ver.1.30

The software version at the time of purchase of DESR-5100/7100 is Ver.1.30. If you update (renew) this software, it will be Ver.1.31.

For details of Ver.1.31, please refer to Ver.1.31 update details (page 8).



Shortened the time to return to the home menu from "PlayStation@BB"

Improved display of some content on PlayStation@BB

**Other** screen transitions on the home menu screen have been made smoother.

# to update

There are two methods for updating this unit: network and CD-ROM (page 14).

## Updating (updating) over the network

Network settings before network update

Please be sure to complete For network settings,

See "Network Connections" in the instruction manual that comes with the "PSX".  
and settings" (page 80).

### Step1

Use Mm<, to select [Network Update] from  
(Settings) in the home menu.

 Press.

The network update start screen appears.  
is shown.

### Step2

 Press.

Network update work has started.

vinegar.

"Flow of network update" (12  
page) and follow the on-screen instructions.  
please.

**IMPORTANT** The unit's power will  
automatically turn off at step 11 in  
"Network update flow". After confirming  
that the power lamp of the unit is red,  
turn the power off and on again.

Error message displayed during update

If so, please start over from Step 1 . still the  
error message

If a message appears, please refer to the back cover

"PSX" upgrade dedicated desk

Please contact us.

## Flow of network update


### 1 Software check




### 2 Software download



### 3 "DNAS" certification

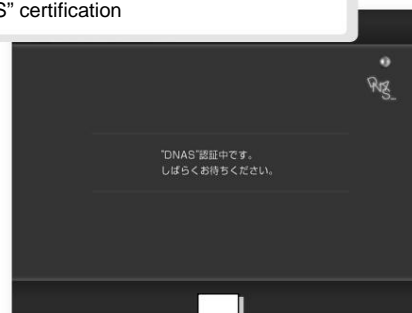


### 4 Display of software license agreement

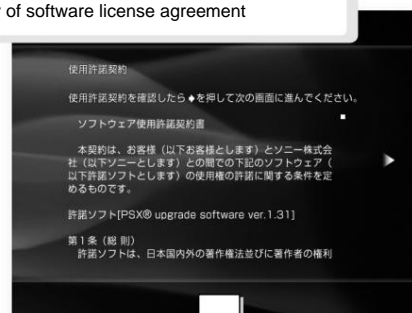


to 5


5 Confirmation of software license agreement

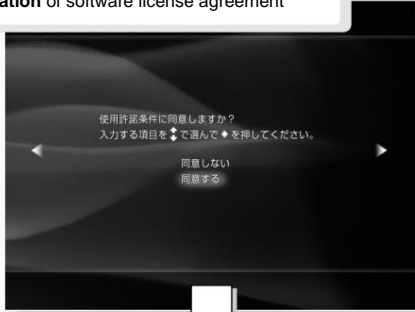

6 Installation confirmation screen

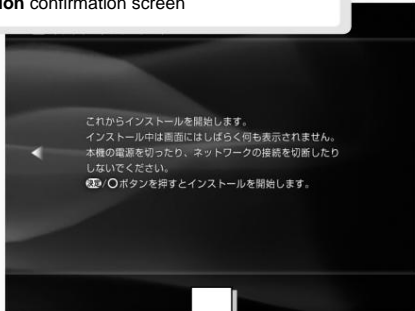


7 Automatically reboot

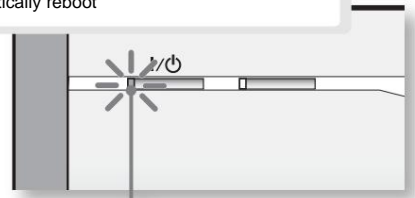

Power light flashes green




8 updates continue

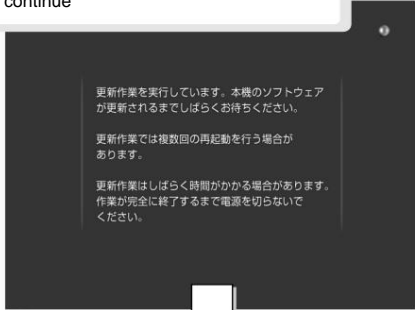

to 9

9 Reboot automatically

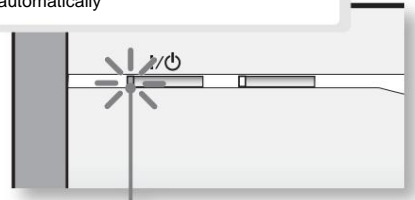


Power light stays green



10 updates continued





11 Power turns off

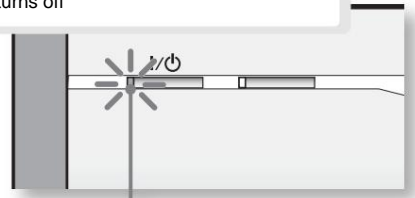

solid red




12 Turn on the power.

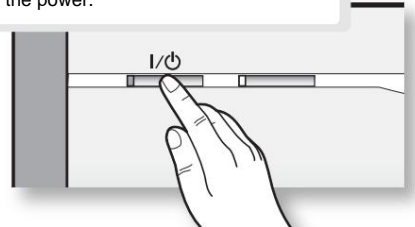

to 13

# to update

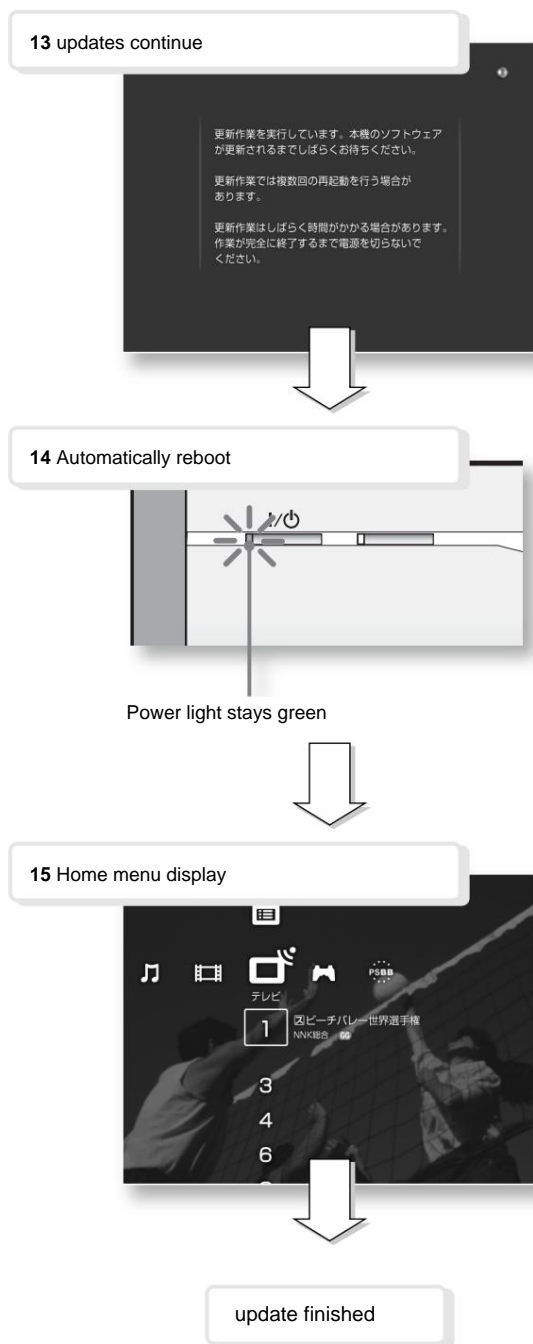

Check if this unit has been updated (page 17).  
Confirm that the machine version is updated to "1.31".  
please.

## Updating (updating) with CD-ROM

If you cannot connect to the network using "PSX", please update  
It can be updated with a CD-ROM for software.




The update CD-ROM will be distributed free of charge. Details  
For details, please see the website listed on the back cover.


Or contact the "PSX" Upgrade Desk.

### Step1

Insert the update CD-ROM into this unit.  
do.

### Step2

Use Mm<, to select (Disc)  (game)  from the home menu and press  .  
CD-ROM update work will start.

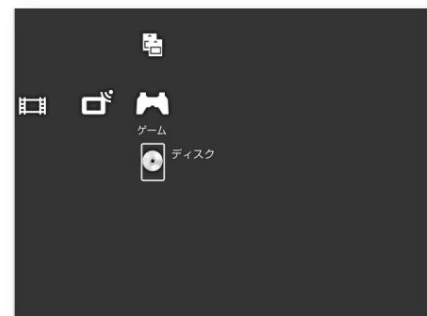

Refer to "CD-ROM update flow" ( page 15 )  
and follow the on-screen instructions.

please give me.

important

At step 13 of "CD-ROM update flow", the  
power of this unit is automatically turned off.  
After confirming that the power lamp of the  
unit is red, turn the power off and on again.  
when.

Error message displayed during update


If so, please start over from Step 1 . still the  
error message

If a message appears, please refer to the back cover  
"PSX" upgrade dedicated desk  
Please contact us.


# Flow of CD-ROM update

1 Update start screen


2 List of update items

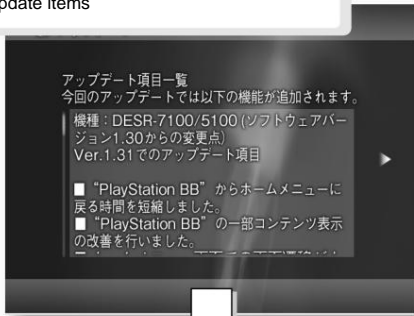

3 Display of software license agreement

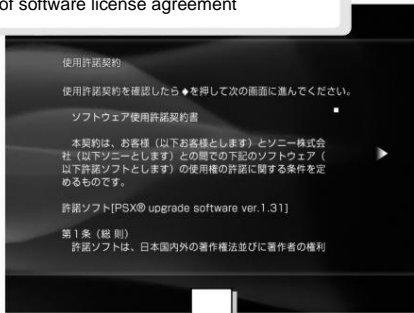

4 Confirm that you agree to the software license

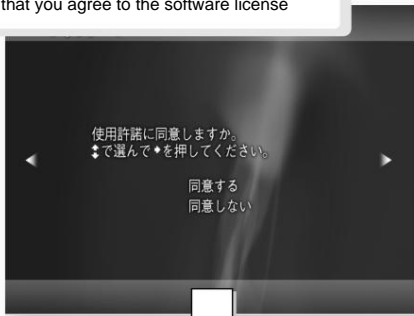

to 5


5 Start confirmation screen




6 Update preparation screen



7 Installation confirmation screen





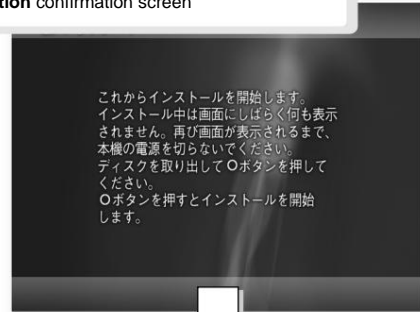


8 Eject the CD-ROM

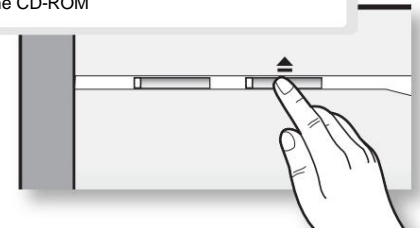

to 9

# to update

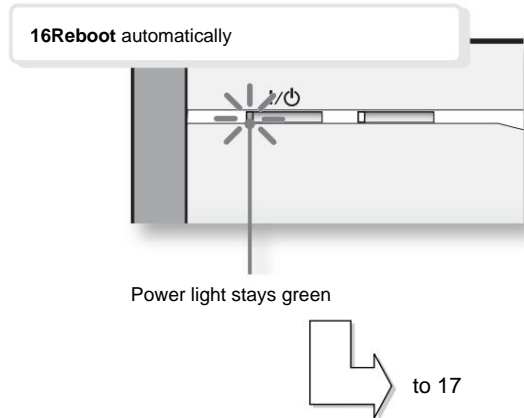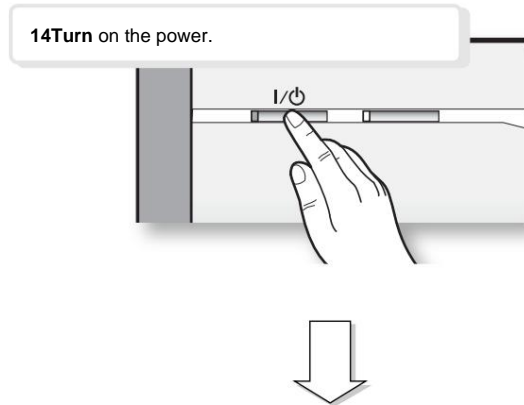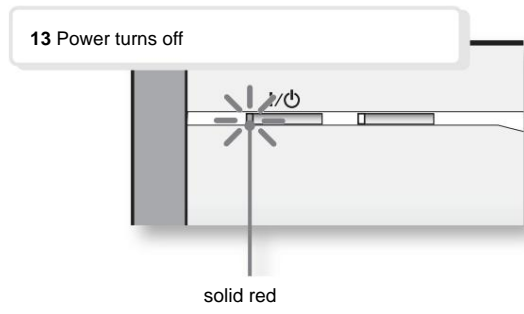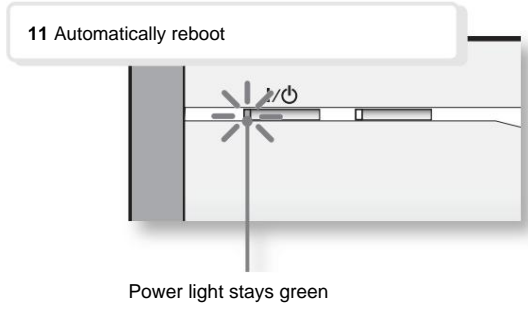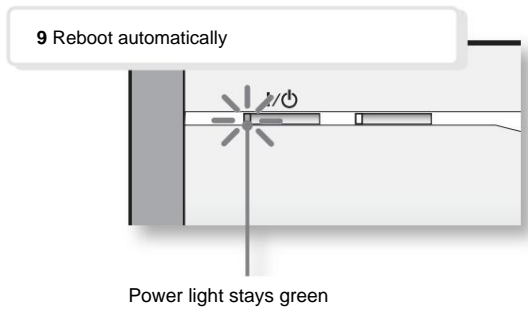



## 17 Home menu display



update finished

Check if this unit has been updated (page 17).  
Confirm that the machine version is updated to "1.31".  
please.

## Checking if the unit has been updated

## Step1

Mm&lt;, for home menu



(setting)

Select [Device settings] from .

## Step2

Use Mm to select [Information].

Make sure that the "PSX" column is set to "1.31".

Please confirm.



# Operation explanation of functions added in Ver.1.31

## Setting chapter marks

Chapter marks can be added to videos recorded with this unit. If you add a chapter mark, the number of chapter marks per video increases. You can skip or return with the play bar.

### Step1

Press Mm<, for home menu (video icon) to which you want to add a chapter mark. Select a video and press .



### Step2

Use Mm to select "Edit" and press . The edit screen is displayed.



### Step3

when you want to add a chapter mark (R3) push.

A chapter mark is set on the playback bar.

increase.

99 chapter marks per video

You can add



### Step4

After setting chapter marks, use Mm<, to select [Done] and press .

## Undo chapter mark

### Step1

Press Mm<, while the edit screen is displayed (pause icon) and press .

### Step2

Select the play bar with Mm.

### Step3

(L1) or to select the chapter you want to cancel. Select Mark.

### Step4



(R3) Press.

The chapter mark selected in Step 3 is canceled. will be


## To cancel all set chapter marks

teeth

### Step1

Mm<, for home menu  (bidet E) to remove the chapter mark  
Select an image  and press .

### Step2

Use Mm to select "Cancel edit"  and press .  
All channels set for the selected video  
The print mark is canceled.

All edits, not just chapter marks  
Please note that the settings will be canceled.

## Notes on "Setting chapter marks"

- When the play bar is not selected, the chapter mark cannot be set or canceled.

Edited the video of the part where the chapter mark is set  
chapter marks included in that part are cancelled.

increase.

## Optimize your footage

Reduce the video data size or set to skip during editing.  
You can completely delete the specified scene.


### Step1

on the home menu  (video) from  
Press  Select.

An option screen appears.




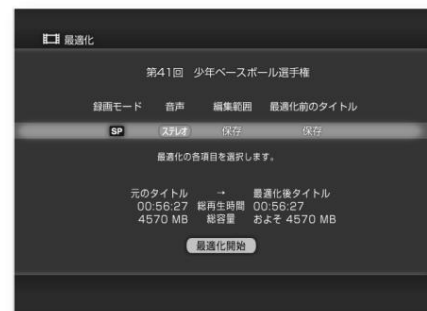
### Step2

Use Mm to select [Optimize]  and press .  
The optimization screen will appear.



### Step3


Use Mm to select the optimization setting  and press .



# Operation explanation of functions added in Ver.1.31

## Step4


Use <, to select the item to set.

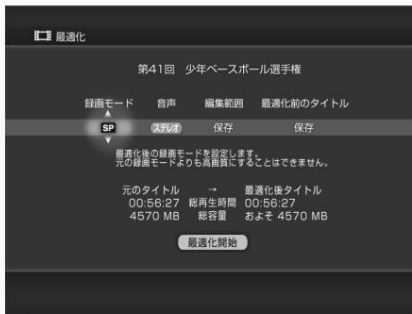

## Step7


Use Mm to select [Start optimization] and press .

Optimization work begins.

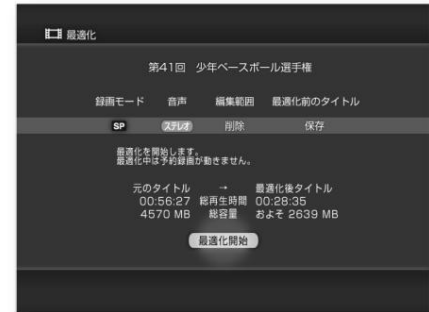

## Step5

Sets the item selected with Mm.

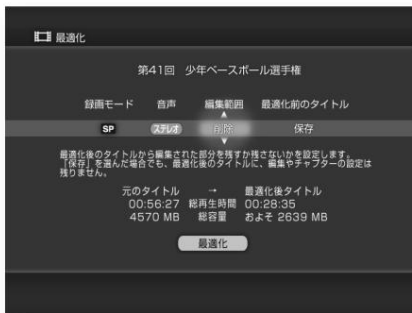

in the upper left of the image during optimization. **Re-Rec** the mark is It shows.



## Step6

After setting all items, press



Items that can be set in Step 3

Item	explanation
recording mode	Set the image quality after optimization. reduce image quality Then the data size will be smaller.
audio	The audio of the video recorded in main + sub, DVD-RW (Video mode), DVD-R, When dubbing to a DVD+RW disc Set the audio recording method for
Edit range	The part set to be skipped by editing is Set whether or not to delete completely when optimizing. set. Even if you select "Save", the Add edits and chapters to optimized titles settings will not remain.
Pre-optimized title Save or	delete the pre-optimized title. set the

### When you want to stop optimization halfway

Use Mm to select [Cancel optimization] from the option menu and press



## Notes on "Optimize video"

- When optimizing the video of a program that includes a copy control signal that is "recordable only once", the scene that includes the copy control signal will be recorded as a blue image and no audio will be recorded.
- When optimizing video containing copy control signals, use the Titles before optimization cannot be deleted.
- Chapter information set during editing will be added to the optimized video. Not reflected.
- During optimization, when playing ATRAC3 format music, Sound skipping may occur when inserting or removing a CD, "Memory Stick" or digital camera.
- If there are many recorded titles (more than 300), sound skipping may occur when ATRAC3 format music is played during optimization.
- The following operations and functions do not work during optimization.
  - Start scheduled recording
  - Capture photos
  - music capture – dubbing
  - change settings
- When optimization is performed, the first image of the title after optimization is registered as a thumbnail.

## dub to dvd

You can dub videos recorded on this unit to a DVD.  
Before dubbing, prepare a DVD suitable for your purpose.

## Types of discs that can be dubbed with this unit

There are several types of discs that can be dubbed with this unit.

increase.

For details on the types of discs that can be dubbed with this unit, see "Dubbing Discs that can be recorded" (page 45).

## About the video length that can be recorded on a DVD

Length of video that can be dubbed to DVD depending on video recording mode is different.

recording mode	length
HQ	HD 1 hour 1.5
HSP	↑ hours 2
SP (standard)	hours
LP	3 hours
EP	4 hours
SLP	6 hours

## When dubbing to DVD-RW in VR mode

Before dubbing to DVD-RW in VR mode,

You need to set the ringing method. For more information, see Edit Dubbing when dubbing video to VR mode of DVD-RW method" (page 28).

### A playlist is

management information for video playback, such as the playback order. It's called a lay list.

Tighten the DVD-RW disc on which the playlist is recorded.

The video list displays original videos and playlists.

vinegar. in the playlist **PLIST** mark is displayed.

If you select the original video, it will be set not to play in editing.

It will play back as it is.

When you select a playlist, the parts you set to not play in the edit Skip and play.

# Operation explanation of functions added in Ver.1.31

## Flow of the dubbing wizard

Step 1 Preparing the disc for dubbing



Step 2 Select video to dub



Step 3 Select DVD menu

DVD-R, DVD-RW (Video mode), DVD+RW only



Step 4 Confirm the order to write the title



Step 5 Create a DVD menu

DVD-R, DVD-RW (Video mode), DVD+RW only



Step 6 Dubbing to DVD

## Step 1 Prepare the disc


Step1

Insert a DVD disc into the unit.



Step2

Use **Mm** to select (Dubbing) and **press**.

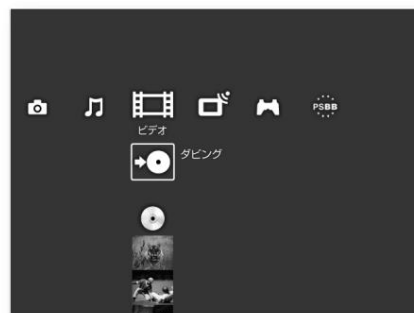


Step3

**決定** Press.

The initialization (format) start screen appears.

increase.

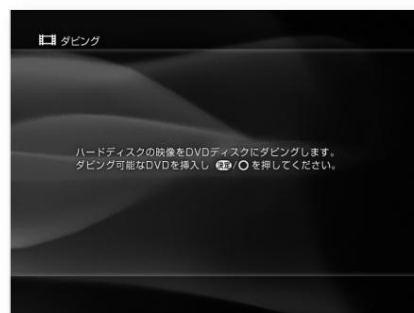

## If you want to add video to a disc that already contains video

DVD-RW VR mode and DVD+RW are dubbed once.

You can add videos to a disc that has been recorded.

If you select in Step 3 of "Step 1 Prepare the disc" (page 22) screen for executing additional recording will be displayed.



If you want to add, select [Yes] here.

If you select [Yes], proceed to Step 5 of "Step 2 Selecting the video (title) to dub" (page 24). If you select [No], proceed to Step 4 (page 23) of "Step 1 Prepare the disc".

Erasing dubbed images This unit cannot erase only part of the dubbed images.

I can't

If you want to erase the video, format the disc.

Erasing images recorded on a disc using another device

About the empty space caused by

In the case of DVD-RW (VR mode), images are added to this empty space. can be written.


For DVD+RW, this free space is not available.

## Step4

Use <, to select [Yes] and press .

An uninitialized disk is inserted.

Initialization starts here.

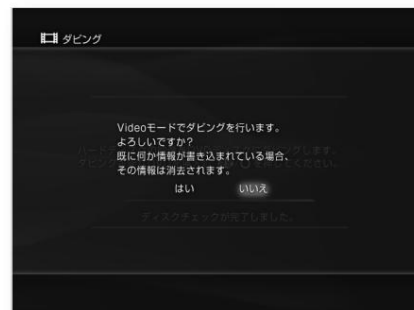

For DVD-RW, refer to the list below.

After selecting the recording mode that suits your purpose, Please select Yes.

For DVD-RW, select [DVD-RW recording]. Select [Change mode] to display the mode selection screen. is shown.

	Video mode	VR mode
Renewable equipment	Almost any DVD player	VR mode compatible DVD player only
DVD menu creation possible		Unable to create
postscript	not possible	possible
remarks		Playlist creation possible

## To reinitialize an already formatted DVD+RW or DVD-RW disc with the same video mode

Go to [Initialize] in the option menu of each disk.

please give me.

# Operation explanation of functions added in Ver.1.31

## Step 2 Select the video (title) to dub


### Step5


Use Mm to select the titles in the order you want to dub, then press .

They will be dubbed in the selected order. screen right  
In the pie chart displayed on the side, dub  
While checking the free space on the disc,  
Please choose.



If you want to change the order

1 Use Mm to select the selected title again and press .   
The selection is cleared.

2 Reselect the titles in the order you want to dub and press . 

Titles that can be recorded only once Titles that include copy control signals that can be recorded only once cannot be dubbed to DVD. such data

The title screen will be displayed in red in Step5.



displayed in red


**If the total size of the selected titles exceeds the free space on the disc** In such a case, change the title recording mode and save the data

By reducing the size, it is possible to match the free space of the disk.

You can This unit automatically changes the title recording mode.

There are two methods, one is to change the recording mode and the other is to manually change the recording mode. I will.

When you want to adjust automatically


After selecting a title in Step 5, select [Yes] with <, and press . The player automatically  resizes the title.


increase.

When you want to adjust manually

1 At Step 5 , use Mm to select the title whose size you want to change and press .



2 Use Mm to select [Rec Mode] and press 

3 Use Mm to select the new recording mode and press 

You cannot select a recording mode with higher image quality than the recording mode before the change.

I can't

Recording modes decrease in size in the order shown in the table below.

recording mode	large size	high quality
HQ	↓ Small	↑
HSP		
SP		
LP		
EP		
SLP		

The title whose recording mode has been changed will be changed as shown in the screen below.

The new recording mode will be displayed.





When there is a title for which you do not want to change the recording mode

If you protect a title you don't want to change, the title will automatically

Even when resizing, the protected title remains the original

You can dub while in recording mode.

1 At Step 5 , use Mm to select the title whose size you want to change

△ and press .

2 Use Mm to select [Lock Mode] and press .

The recording mode is protected, and a mark is attached to the changed recording mode display.



### Step6

After changing the recording mode, press .



## Step 3 Choose a DVD menu design

A DVD menu is a list of titles displayed first when a DVD is played.


DVD-R, DVD-RW (Video mode), and DVD+RW discs can be played with this unit.

Can only be created when dubbing on a disc.

When dubbing using a DVD-RW (VR mode), the DVD

The menu creation screen is not displayed. "Step 4 Write the title


Checking the Loading Order" (page 26).

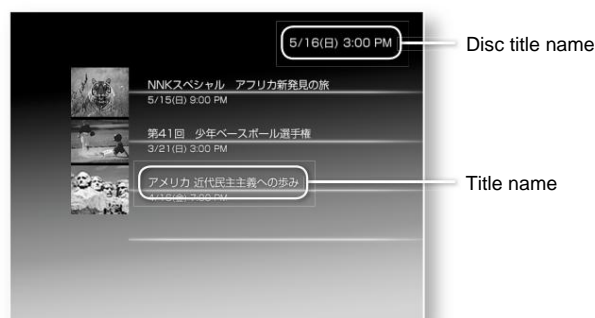

### Step7

Use Mm to select the DVD menu design (決定)

Press.

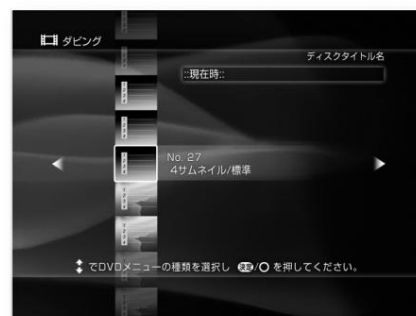

The number of titles that can be displayed on one page differs depending on the DVD menu.

Become. Zoom in and view the DVD menu tight

Please check the number of The number of titles does not fit on one page

DVD menus with the same design are automatically added and duplicated.

It will be a DVD menu of several pages.

When you don't want to create a DVD menu

"Create menu" displayed at the top of the DVD menu list

Please select "No".


Precautions when adding video to a DVD+RW created with another device

is replaced by

A DVD menu created on another device is considered to have video added on this unit.


It will disappear after a while.

# Operation explanation of functions added in Ver.1.31

To enlarge and check the DVD menu design , press while selecting the design you want to check in Step 7, and select [Enlarge] with Mm. 

If you want to display the disc title name on the DVD menu, you can display the disc title name on the DVD menu.

I can do it. The default setting is to create a DVD menu on the DVD menu. It is set so that the time when it was created is displayed.

1 While selecting the design you want to check in Step 7,  Press and use Mm to select [Rename].

A 2 -character input screen will appear, so enter the disc title name. input.

## Step 4 Check the order of writing titles

Titles are written in order from top to bottom.

### Step8

Check the writing order of the title and  press

vinegar.



If you want to change the order of the titles or change the recording mode, press < and return to Step5.

## Step 5 Create a DVD menu

Create a DVD menu with the design you chose in step 3.

Creating a DVD menu may take some time. work

Please wait for a while until it is completed.

## Step 6 Dubbing to DVD

When the menu creation is finished, dubbing will start automatically and the Finalize later.

If optimization work occurs during dubbing, the dubbing will take some time. It may take

Optimization work includes changing the recording mode during dubbing, Occurs when the recording method is changed.

## Notes on "Dubbing to DVD"

- Some DVD devices may not be able to play the disc even if it is finalized correctly. may not work.
- You can finalize a disc recorded on another DVD device with this unit. you can't.
- During dubbing, timer recording and recording cannot be performed.
- When dubbing in DVD-RW Video mode, the editing results will not be displayed. is reflected.
- When the remaining hard disk space is low, it may not be possible to create a DVD menu, or dubbing may not be possible if optimization is required.
- Chapter information set during editing is optimized during dubbing. It will not be reflected in the video you performed.
- Most digital terrestrial, BS, and 110-degree CS programs contain copy control signals. It is not possible to dub or move a program that includes a copy control signal that says "record only once" to a DVD. With "PSX", programs that can be recorded only once can only be recorded on the hard disk.
- DVD-RW (VR mode) from which all titles have been deleted on another device, Additional data cannot be added to DVD+RW discs.
- Dubbing may take longer than usual if you change the recording mode or the audio recording method during dubbing.


## Initialize the DVD

### Step1

Insert a DVD disc into the unit.

### Step2

Use **M** to select (DVD) and press **A**.

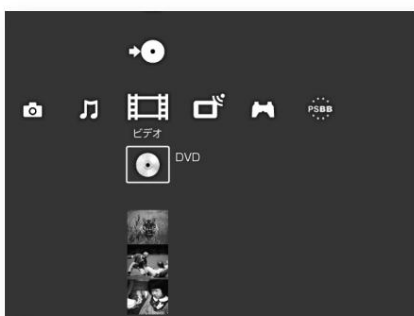

### Step3

Use **M** to select [Initialize] and press **A**.

DVD initialization starts.



### Step4

Press **A**.



For DVD-RW, select [Change DVD-RW recording mode] here.

and the mode selection screen is displayed.

Select the recording mode that suits your purpose from the list below.

Select [Yes] from



	Video mode	VR mode
Renewable equipment	Almost any DVD player	VR mode compatible DVD player only
DVD menu creation possible		Unable to create
postscript	not possible	possible
remarks		Playlist creation possible

# Operation explanation of functions added in Ver.1.31

## Setting the dubbing method when dubbing edited video to DVD-RW VR mode

When dubbing video edited in DVD-RW VR mode,  
Created a raylist or set not to play in edit  
You can delete parts and dub them.



### Step1

Mm<, for home menu  (setting)  
Select [Video settings] from and press .

### Step2

Use Mm to select [VR Mode Playlist] and press .

### Step3

Use Mm to select the dubbing method  and press .

Item list

Dub the

created playlist and the original video. Parts that were set not to be played during editing remain in the original video.


From the original


video that will not be created, dubbing is performed by deleting the parts that were set not to be played during editing.

## A playlist is management

information for video playback, such as the playback order.

It's called a lay list.

on the home menu  (video), the playlist is recorded

If you select a DVD-RW disc that is loaded  and press

The view shows the original video and playlist.



In the playlist  mark is displayed.

If you select the original video, it will be set not to play in editing.

It will play back as it is.

When you select a playlist, the parts you set to not play in the edit



Skip and play.

## Setting the audio recording method when dubbing recorded video of bilingual broadcasts



DVD-R, DVD-RW (Video mode) for recording video of bilingual broadcasts (mode), set the audio recording method when dubbing to DVD+RW. increase.

When dubbing DVD-RW (VR mode), the main audio and sub-audio Both voices are recorded.



### Step1

Mm<, for home menu  (setting)  
Select [Video settings] from and press .

### Step2

Use Mm to select [DVD dual language recording audio]  and press .

### Step3

Use Mm to select the recording method  and press .

Item List

Main

Audio Only the main audio is recorded during dubbing.

Secondary audio

Records only sub-audio during dubbing.

## Recorded audio when dubbing recorded video of bilingual broadcasts to DVD

Recorded video that contains both main and sub audio

The sound that can be recorded differs depending on the disc used for recording.

vinegar.

at the time of recording HDD bilingual recording audio setting	DVD discs and recording modes that can be dubbed		
	DVD-R (Video mode)	DVD-RW Video mode VR mode	DVD+RW (+ VR mode)
Main voice • • •			
Sub-audio • • •	Main+Sub-audio	ÿ ÿÿÿ	

ÿ Recorded with the audio selected in the "DVD dual language recording audio" setting. will be

• Only the audio of the HDD bilingual recording audio set at the time of recording is dubbed will be

ÿ Both the main and sub-audio are dubbed, and the main and sub-audio are You can switch voice


**please note**

When recording bilingual broadcasts broadcasted by an external input device, set the external input audio setting of this unit to "Dual audio" in advance. If you record with the external input audio set to "Stereo", you will not be able to switch between the main/sub audio during playback even if you set the HDD dual language recording audio setting to "main + sub audio".

## Switch the visualizer to a still image

From Ver.1.31, still images (2 types) are added to the visualizer types joined.

### Step1


Press while playing  a song.

The operation panel will be displayed.


### Step2

Select the icon on  the operation panel  several times.

A still image is displayed.

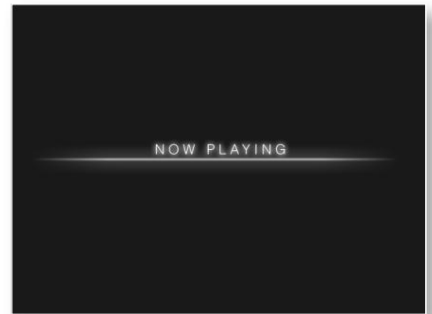


### Step3

icon on the operation panel  again.

Press  Select.

Another still image is displayed.

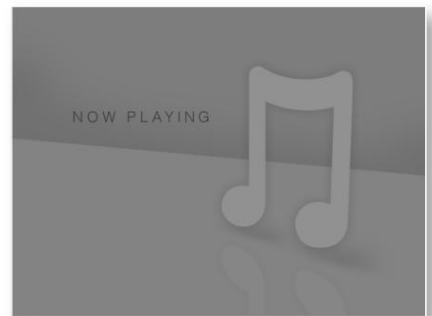

# Operation explanation of functions added in Ver.1.31

## About "PlayStation®BB"

Using the "PlayStation®BB" on this unit allows you to use the content provided by game software manufacturers and Internet service providers. You can browse the content that is displayed.

Various contents of "PlayStation®BB",

To view the "PlayStation®BB" info, the system must be connected to the network.

For information on how to connect to the network, please refer to the

See page 80 "Network connection and settings" of the operating instructions.

Please see

## Enjoy "PlayStation®BB"

### Step1

Mm<, for home menu



Select the channel you want to view from ("PlayStation®BB") and press .

Connect to the network and select the channel is displayed.



Service content provides content game software makers and Internet It depends on your internet service provider. For details, refer to each game software manufacturer or internet service Please contact your provider.

## Browse "PlayStation®BB" info

The "PlayStation®BB" info contains the terms of use for "PlayStation®BB" .

### Step1

Mm<, for home menu



Select ["PlayStation®BB"

Info] from ("PlayStation®BB") and press .



## Precautions when using "PlayStation®BB"

- Use this unit to download "PlayStation®BB" content, etc. cannot be downloaded.
- A message will appear on the screen when you try to download from each channel of "PlayStation®BB", but this is not a malfunction.






- You cannot view paid content on this unit.

# Operation explanation of functions added in Ver.1.20


Change the content of the recording reservation in the program guide

## Step1

Mm<, for home menu  (Tele)  
Select  (program guide) from B) and  Press .



## Step2

Use Mm<, to select the program you want to change  
Press  and .




## Step3

Use Mm to select the setting item  and press .




## Step4

Use <, to select the item to change.

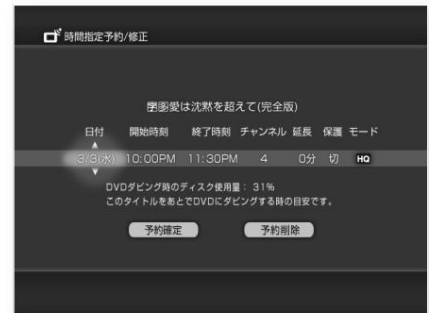


## Step5

Change the item selected with Mm.

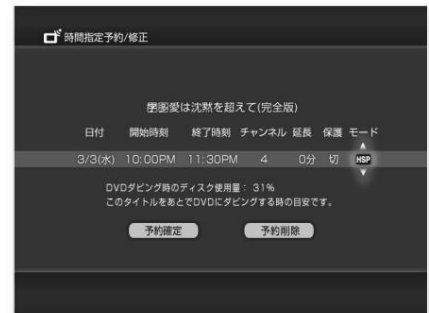


## Step6

After setting all items, press  .



## Step7

Use Mm to select [Confirm Reservation] and press .

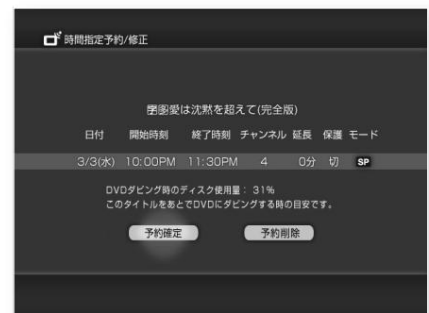

# Operation explanation of functions added in Ver.1.20

## Canceling a recording reservation in the program guide

### Step1

Press **Mm<**, for home menu (Tele TV set icon) and press **Select** (program guide) from the home menu.



### Step2

Press **Mm<**, to select the program you want to cancel. Press **Select**.



### Step3

Use **Mm** to select [Delete reservation] and press **Select**.



## Dubbing with DVD+RW

From Ver.1.20, you can also dub DVD+RW discs.

Now

For details on how to dub, refer to "Dubbing to DVD" (21 page).



## Fast-forwarding video with sound (fast playback)

If you select x1.3 on the operation panel, you can play the video with sound at 1.3x speed .

### Step1

Press while playing a video 

The operation panel will be displayed.

### Step2

Mm<,in  Select x1.3  and press .







#### please note

- Fast playback cannot be used with commercially available DVD-Video (DVD-ROM).
- Audio is output from the optical digital output of this unit even if Dolby Digital is set to "On" when using fast playback for videos recorded in recording modes other than HQ or dubbed DVDs . I can't. Audio is output from the optical digital output of this unit regardless of the Dolby Digital setting for video recorded in HQ recording mode .


## Playing back movies and Clip Motion shot with a Sony digital still camera


Taken with a Sony digital still camera "Cyber-shot"  
Playback movies (MPEG1 format) or Clip Motion (GIF format) can live.




### Step1

Press Mm<, to select Photo (Photo) in the home menu. from  ("Memory Stick") or  (digital camera), (data  CD), (album) and press . 

### Step2

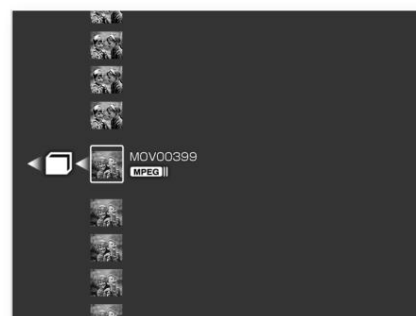Use Mm to select a movie or clip motion  and press .



If you select  ("Memory Stick"), , or (digital camera), or (data CD) in Step 1 , the folders saved in the "Memory Stick" or digital camera will be displayed in Step 2. select the folder that contains it and press . Press to display a list of movies and clip motions saved in the selected folder. Select the movie or clip motion you want to see and press again. 

#### Precautions when playing back on

this unit Photos and videos that can be played back on this unit are JPEG/GIF/TIFF format photos and MPEG1 format videos taken with a Sony digital still camera "Cyber-shot", as well as Clip Motion. increase.

- High bitrate MPEG1 formats such as HQ mode and VX mode Expression videos may not play properly.
- It may take a long time to play MPEG format movies or TIFF/GIF format photos from a "Memory Stick", CD-R, or digital camera. In such a case, import the entire folder containing the videos or photos you want to play back to this unit before playing them.


# Operation explanation of functions added in Ver.1.20

- Video files cannot be displayed as a slide show.  
Himm.
- Thumbnails are displayed for photos with large file sizes.  
An icon may appear instead.

## Control a video that is playing


You can use the operation panel displayed on the screen to  
You can control promotions.

### Step1

Press while viewing a photo. 

The operation panel will be displayed.

### Step2

Select the icon you want to use with Mm<, 








Press.



control panel


Icons that can be used on the operation

panel Some icons may not be displayed depending on usage conditions.


project	explanation
 make it an album cover	Photos are registered as album icons. When a video or clip motion is used as an album jacket, the first frame of the video or clip motion is registered as an icon.
 Screen display	Switches the screen display.
 Previous Photo	Displays the previous photo or video.
 Next Photo	Displays the next photo or video.
 reproduction	Play the stopped video.
 Pause	Pauses the video that is playing.
 stop	Stop the video that is playing.


## About (previous photo)

Select when playing an MPEG1 format video for 3 seconds or longer.




Press  and to return to the beginning of the video being played and start playing.

increase.

within 3 seconds after starting to play MPEG1 format video 

Press to  select and press to return to the previous photo or video in the video being played.  
live.





## Taken with a Sony digital still camera Importing videos and clip motions

 ("Memory Stick") or  (Digital camera),  
 Movies and clip motions saved on (Data CD)  
 can be imported into the unit.



For the file structure of the CD, see page 43, "Memory Stick"  
See page 46 for the file structure of the

### Import by folder

#### Step1



Press Mm<, to select Photo (Photo) in the home menu.  
 from  ("Memory Stick") or  
 (digital camera), (data   
 CD) and press .

#### Step2

Use Mm to select the folder you want to import  and press .

A folder options menu will appear.  
 increase.

#### Step3




Use Mm to select [Import]  and press .

Importing will start. on screen instructions  
 Then import the folder. finger  
 The movie is imported to the specified album.





### Import by file

#### Step1



Press Mm<, to select Photo (Photo) in the home menu.  
 from  ("Memory Stick") or  
 (digital camera), (data   
 CD) and press .

A folder will appear.


#### Step2

Use Mm to select a folder  and press .



#### Step3

Use Mm to select the video you want to import  and press .

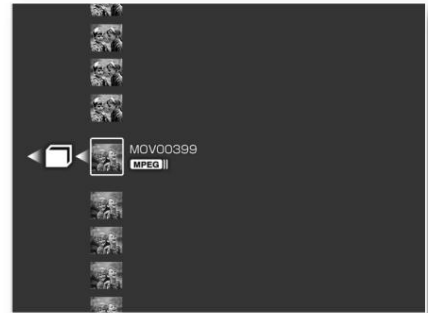
File information in [Information] of the option menu  
 You can check the type.



#### Step4

Use Mm to select [Import]  and press .


Importing will start. on screen instructions  
 Therefore, you can take videos and clip motions  
 Please come in.

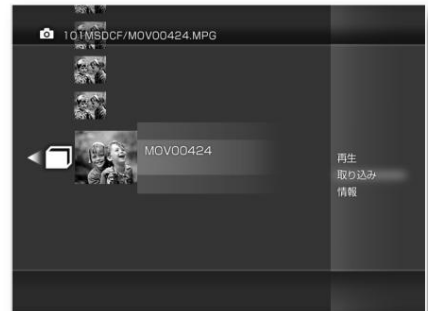


# Operation explanation of functions added in Ver.1.20

## Play back photos and videos saved on CD-Do

### Step1

Press Mm<, to select Photo (Photo) in the home menu.  
Select (Data CD) from and press . 

### Step2

Use Mm to select [Folder] and press . 

### Step3



Use Mm to select a photo or video and press . 

## Recording bilingual broadcasts (dual audio broadcast)


With this unit, when recording programs such as bilingual broadcasts, You can record it in a street way.

### Record primary or secondary audio only


#### Step1

Mm<, for home menu  (setting)  
Select [Video settings] from and press . 

#### Step2

Use Mm to select "HDD dual language recording audio"    
Press.



#### Step3

Use Mm to select "Main Audio" or "Sub Audio"    
Press.


### Record both primary and secondary audio

You can switch between main and sub audio during playback.

#### Step1

Mm<, for home menu  (setting)  
Select [Video settings] from and press . 

#### Step2

Use Mm to select "HDD dual language recording audio"    
Press.



#### Step3

Use Mm to select "Main + Sub" and press . 


### Recording bilingual broadcasts from external inputs

In addition to the setting for bilingual broadcasting, set "External input audio setting" to "Dual". Please change it to "Double voice".


#### Step1

Mm<, for home menu  (setting)  
Select [Video settings] from and press . 

#### Step2

Use Mm to select "External Input Audio Settings" and press .    
vnegar.

#### Step3

Use Mm to select "Dual Audio" and press . 

---

**Precautions when listening to the audio of recorded video of  
bilingual broadcasts through the optical digital output**

When "Dolby Digital" in [DVD Settings] is set to "On", the following  
I cannot switch the audio of the video.

- Recorded video recorded in a recording mode other than HQ
- Dubbing video recorded in a recording mode other than HQ.

DVD

---

**Precautions when recording dual audio programs ( digital CS  
broadcast programs, etc.) from the external input (LINE)**

If you set "External Input Audio Setting" to "Stereo", the audio will be  
Cannot switch.

# Operation explanation of functions added in Ver.1.10

## Change the order of videos

You can now sort the list of recorded videos.

vinegar.

### Step1

Mm<, for home menu



Select an image and press .

The video options screen will appear.

### Step2

Use Mm to select [Change Order] and press .

Each time is pressed in "Change sort order", the

The sort order is switched in the following order.

By date (newest first)

mBy date

(oldest first) mBy

name (y)

mBy name (y) mBy

genre mBy

unwatched

The order of the currently displayed images is displayed on the screen.

You can check it in the upper left.



Video option screen



Current sort order

## Skip the video to the next scene and play it back (flash)

on the operation panel



A button has been added that allows you to skip (return) to a scene about 15 seconds ahead (backward). ) will be available for playback.

### Step1

Press while playing a video.

The video control panel will be displayed.

### Step2

Mm<, (flash-)



Select (Flash +) and press



+ is selected and pressed once, about 15 seconds forward (backward).

You can skip (return) to the scene

vinegar. Press twice to move forward (backward) for about 30 seconds.

You can skip (return) to the scene.

video control panel



Flash +  
Flash -

## Using the flash with the L2/R2 button on the remote control

If you change the setting of the L2/R2 button on the remote control, Flash is ready to use.

### Step1

Mm<, for home menu



Select [Video Settings] from and press .

### Step2

Use Mm to select [L2/R2 button settings] and press .

vinegar.

### Step3

Use Mm to select [Flash] and press .

L2 to Flash-, R2 to Flash+

Become.

## About L2/R2 button settings

project	explanation
search	Jump to the desired scene while fast-forwarding or fast-reversing the video. Select when you want to skip.
I want to skip the flash image to the scene about 15 seconds ahead (return (i) Select when	

If you make this setting, the analog controller for exclusive use of the separately sold "PSX" (DESR-10) L2/R2 button will also switch at the same time.

## please note

When editing video even if the remote control L2/R2 button setting is changed to flash, the L2/R2 button works as a search.

## Play MP3 songs



Playing MP3 files (songs) saved on a CD-R on a computer, etc.  
You can

## Step1


Insert a CD-R into this unit.


on the home menu  to  (data CD) is displayed.

## Step2

Use  to select (Data CD) and  press .


## Step3

Use Mm to select [Folder]  and press .

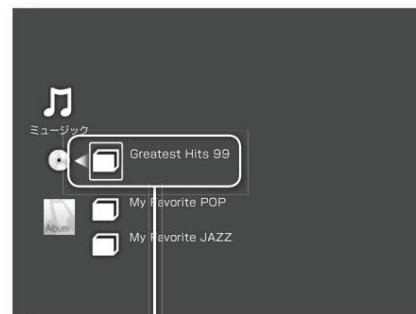

folder

## Step4

Use Mm to select the song you want to  play and press .

## please note

MP3 files saved on discs other than CD-R cannot be played on this unit.

Hmm.

# Operation explanation of functions added in Ver.1.10

## Importing MP3 songs to this unit


Importing MP3 files saved on a CD-R to this unit  
I can.

### Import by folder

#### Step1


Mm<, for home menu  from   
Select (Data CD) and  press .

#### Step2

Use Mm to select the folder you want to  import  
push.




A folder options menu will appear.  
increase.

#### Step3


Use Mm to select [Import]  and press .  
Importing will start. on screen instructions  
Therefore, import MP3 files.  
The songs are imported to the specified album.

### Import MP3 files (songs) from CD-R


#### Step1

Mm<, for home menu  from   
Select (Data CD) and  press .  
A folder will appear.


#### Step2

Use Mm to select a folder  and press .

#### Step3

Select the MP3 file (song) you want to import using Mm.  
Press  and .

#### Step4

Use Mm to select [Import]  and press .  
Importing will start. on screen instructions  
Therefore, import MP3 files.  
stomach. The songs are imported to the specified album.  
vinegar.


## Connect a keyboard and enter characters

Connect a "PlayStation 2" compatible keyboard to this unit using the USB port .  
When connected, you can type characters without using the on-screen keyboard.  
can be entered.

#### Step1

Connect a keyboard.

Connect as shown in the diagram below.

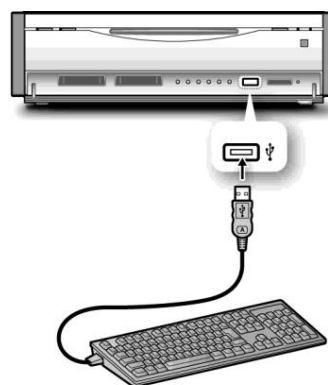

#### Step2

Make keyboard settings.

Keyboard settings and character input as needed  
Please set the How to set  
For details, refer to "Setting the keyboard" (41  
page) and "Setting character input" (page 42).  
J).



## make keyboard settings



Make the following settings according to the keyboard you are using.  
when.

### Set keyboard type


Use this setting when you connect an English keyboard.

stomach.

#### Step1

Mm<, for home menu  (setting)  
Select [Keyboard] from and press .

#### Step2

Use Mm to select [Type] and .

#### Step3

Use Mm to select the keyboard type and .

Item list

English Keyboard

Select when an English keyboard is connected.



japanese keyboard

Select when a Japanese keyboard is connected.


### Setting character input start time when key is pressed and held

When you press and hold a key on the keyboard, characters are entered repeatedly.  
Adjust the time until the

#### Step1


Mm<, for home menu  (setting)  
Select [Keyboard] from and press .

#### Step2

Use Mm to select [Repeat Start Time] and .

vinegar.

#### Step3

Use Mm to select a setting  and press .

item list

short

Press and hold the key to quickly enter the same character.

It's a

standard setting.



long

Even if you press and hold the key, there will be a short delay before the same character is entered continuously. Even if you press and hold by mistake, you can prevent the same character from being entered continuously.


### Setting the Character Input Speed When Pressing and Holding a Key

Set the input speed for characters that are entered when you press and hold the key.  
increase.

#### Step1


Mm<, for home menu  (setting)  
Select [Keyboard] from and press .

#### Step2

Use Mm to select [Key repeat speed] and press .

push.

#### Step3

Use Mm to select a setting  and press .

Item list

Slow

input speed slows down.

standard

This is the standard setting.

Faster

typing speed makes it faster.

# Operation explanation of functions added in Ver.1.10



## Setting character input

Character input when entering characters with a keyboard connected via USB set method.


### Setting the Japanese input method

There are two types of input methods: "Romaji input" and "Kana input".


#### Step1

Mm<, for home menu  (setting)  
Select [Character input settings] from ,  press .

#### Step2

Use Mm to select [Japanese Input]  press .

#### Step3

Use Mm to select the input method  and press .

Item list

romaji input

Japan in romaji using alphabet keys  
enter the word.

Kana input



Enter Japanese using the Kana key.

### set key bindings

Set the Japanese conversion method. This unit has two settings.

So choose the setting that is easy for you to use.


#### Step1

Mm<, for home menu  (setting)  
Select [Character input settings] from ,  press .

#### Step2

Use Mm to select [Key Bind] and press  .

#### Step3

Use Mm to select a setting  and press .


# others

## How to save files to CD-R

Music (MP3), photo, and video files that can be played on this unit are as follows.  
Only CD-R saved by the method below. otherwise stored files cannot be played.


### Creating and saving folders and files

Create a folder directly under (root) of the CD-R, and  
Store music, photos, and video files inside.

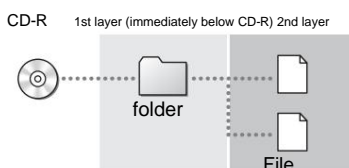

### Precautions when creating and saving folders and files

- Files written directly under the CD-R (root) are not recognized by this unit. (Fig. 1 below).
- Do not create folders within folders (2 below).

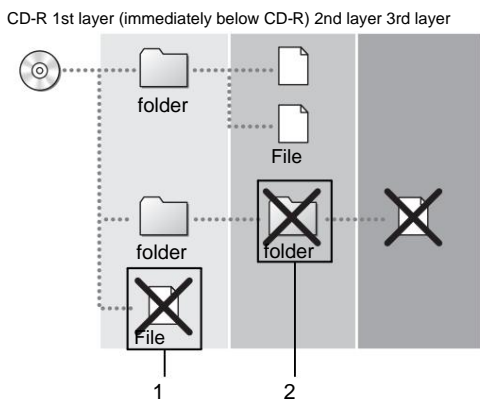

- Do not create more than 40 folders on one CD-R.

stomach.

- Store more than 100 MP3 files in one folder.  
please don't
- More than 201 photo and video files in one folder  
Please do not put it in.

### Precautions when naming folders and files

- Set the file name within 64 characters.

Do not use single-byte characters such as "<" ">" "|" "!" "@" "#" "\$" "%" "&" "'" "?" "\*" "~" "."  
Do not use

- File names and folder names may not be displayed correctly if they do not conform to ISO9660 Level 1, Level 2, Extended Format (Joliet).
- When naming the file, add an extension at the end of the file that matches the contents of the file. File extensions should be either ".JPG", ".GIF", ".MPG", ".TIF" or ".mp3".
- ".JPG" for JPEG image files, ".TIF" for TIFF image files, ".GIF" for GIF image files, and ".GIF" for MPEG1 video files. ".MPG" . If you play a file whose extension and file contents do not match, the operation of this unit will become unstable.
- If you add the extension ".mp3" to a file other than MP3 format, the file may be played back, which may cause noise or malfunction.
- ID3 tags are only compatible with Version 1.0.
- Track names in MP3 files on a CD-R will refer to ID3 tag information if there is an ID3 tag, but the number of characters is limited.

- The track names of MP3 files imported to the HDD are display the file name, but the number of characters is limited.

### Precautions when writing to a CD-R on a computer

- Be sure to use a CD-R.
- Be sure to write with "Disc at once".
- Do not write to a CD-R that has already been written.
- Depending on the state of the disc, it may not be playable.
- Discs recorded in multisession cannot be played.
- CD-RW is not supported.
- Packet writing is not supported.

# others

## Formats supported by this unit

CD-R file system	Character limit for folder and file names
ISO9660 Level 1	8.3 Form
ISO9660 Level 2	Maximum 31 characters (including extension)
extended format (Joliet only)	Maximum 64 characters (including extension)

\* Folders are only supported up to one level.







## Audio standards for writing to CD-Rs supported by this unit

item	Supports MPEG1 Audio	MPEG2 Audio Layer3
write mode	Mode 1 and Mode 2 (Form1)	
Compression method (sampling rate)	48kHz, 44.1kHz, 32kHz 32k to	24kHz,22.05kHz,16kHz
Bitrate Number	320kbps, VBR also possible* 99 (per	8k to 160kbps, VBR also possible*
of files	folder)	
Number of albums (folders)	39	
Album (folder) hierarchy	1	
multi session	incompatible	
m3u playlist	incompatible	
mp3PRO format	incompatible	

\* For VBR, the playback elapsed time display may differ from the actual time.

## Discs that can be dubbed with video

hand

Disc type	Disc name	DVD-R	DVD-RW		DVD+RW
	logo				
	mode	Video mode	VR mode	Video mode	+ VR mode
	Display DVD-Video on this unit		DVD-VR	DVD-Video	DVD+VR
Maximum recording time		about 6 hours			
Compatibility with other devices					
		DVD player playable in	VR mode Compatible devices Playable only on	DVD player playable in	ÿRW Compatible devices Playable only on
Number of times that can be dubbed		only once	Any number of times possible by initializing		What if you do the initialization times possible
Notes after dubbing					For more information page 23
Create DVD menu					For more information 25 pages
Create playlist					For more information 28 pages
bilingual broadcast dubbing of	main audio only		•*2		For more information 28 pages
	secondary audio only		•*2		
	Main audio + secondary audio ÿ*1		ÿ*3	ÿ*1	

\*1 Recorded with the audio selected in the "DVD dual language recording audio" setting.

\*2 Only the audio of the HDD bilingual recording audio set at the time of recording is dubbed.

\*3 Both main and sub-audio are dubbed, and can be switched between main and sub-audio during playback.

# others

## How to save still pictures and video files to a "Memory Stick"

I want to display photos and videos saved on a "Memory Stick"

You can save photos and videos in the following format (DCF\* format) to "Memory Stick". Please save to "tick".

If it is not saved in DCF format, it cannot be played back on this unit.

I can't Some Sony digital still cameras "Cyber

Some models cannot save in DCF format in "Shot".

In this case, move or copy to a DCF format folder on your computer


Then you can play it on this unit.

\* Abbreviation for "Design rule for Camera File system", Japan Electronics and Information Technology Industries Association  
It is a unified standard established by (JEITA).

About where to save the file As

shown in the figure below, save the image file in the 3rd layer.

(Figure 3 below)

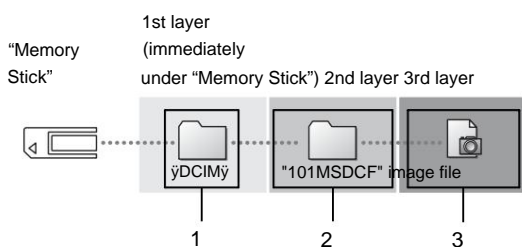

- Create a folder in the first layer directly under the "Memory Stick" (root) . (Figure 1 above)
- Make sure to create the second level folder (folder for saving photos and videos) directly under the "DCIM" folder. (Figure 2 above)

How to name files and folders

- Be sure to name the first-level folder "DCIM" in single-byte capital letters. Please put the front on.
- The folder name of the 2nd layer is 3 single-byte alphanumeric characters + single-byte alpha. Bet 5 characters, total 8 characters.  
Example) "101MSDCF"

- The file name, excluding the extension, must be 8 characters (4 single-byte alphanumeric characters + 4 single-byte numeric characters). Please add one of ".JPG", ".GIF", ".MPG" and ".TIF" as the extension according to the contents of the file . If you play a file whose extension and file contents do not match, the operation of this unit will become unstable.

Example) "MOV00399.MPG"

•DSC00001.JPG•

•DSC00002.TIF•

•CLP00003.GIF•

## software license agreement

This Agreement is between the customer (hereafter referred to as the customer) and Sony Corporation. (hereinafter referred to as "Sony"), the following software (hereinafter permitted software) that stipulates the conditions for licensing the right to use is.

### Licensed software [PSX® upgrade software ver.1.31]

#### Article 1 (General Rules)

Licensed software is subject to the copyright laws of Japan and overseas, as well as the rights of the author. and related rights treaties and other intellectual property rights. protected by relevant laws. Licensed software is Licensed to you by Sony in accordance with the terms of the Agreement. Therefore, the intellectual property rights such as the copyright of the licensed software are transferred to the customer. I will not.

#### Article 2 (Usage Rights)

1. Sony grants the customer a non-exclusive right to use the licensed software. To do.
2. The right to use the licensed software arising from this agreement shall be Licensed software is available on the Internet or you receive distribution from Sony. Sony owned by you from the media you purchased Download one copy for each PSX® (hereafter referred to as this product), It means the right to use on the product.
3. The customer may reproduce, duplicate, copy all or part of the licensed software, Modifications, additions, etc. to this cannot be made.

#### Article 3 (Restrictions on Rights)

1. The customer shall not sublicense, lend or lease the licensed software. It shall not be used by a third party in any other way.
2. Licensed software is one piece of software, in this product Licensed subject to use. All licensed software or any part or component thereof for use in multiple products shall not be separated into
3. The customer may use the licensed software to reproduce the copyrighted works of Sony or a third party. You shall not perform any act that infringes on rights such as rights.
4. The customer shall reverse engineer, Performing source code analysis work such as disassembling and decompiling shall not be
5. Based on this agreement, the customer shall purchase only as an integral part of this product. You can transfer all of the rights related to the licensed software of the customer. increase. However, in that case, the customer must own a copy of the licensed software. and any part of the Licensed Software (including all component parts, media, Including related documents such as manuals, electronic documents and this agreement.

), and provided that the transferee agrees to the terms of this Agreement. case.

#### Article 4 (Rights of Licensed Software)

All rights such as copyrights related to the licensed software are owned by Sony or SONY. for Nee to license to you under this Agreement;

The rights are attributed to the original right holder (hereinafter referred to as the original right holder) who has granted the rights to Sony. and the customer shall comply with Article 2 of this agreement regarding the licensed software. You shall have no rights other than the licenses granted hereunder.

#### Article 5 (Scope of Liability)

1. Sony shall ensure that there are no errors, bugs or other defects in the Licensed Software. or that the Licensed Software will operate without interruption. However, in order to deal with such errors, bugs, etc. software or version that rewrites part of the licensed software Repair of licensed software provided by Jonup, Licensed software For replacement by mail or third-party software in Licensed Software We may notify you of the contact information for defined in this section. Sony shall determine in its sole discretion. In addition, such correction or , even for software that has undergone version upgrades, Unless otherwise specified, the provisions of this Agreement shall apply.
2. Sony shall not, in connection with the Licensed Software, We do not guarantee that we do not infringe the intellectual property rights of third parties. There is none.
3. Sony shall not exercise the rights of use granted by you under this Agreement. Regarding damage caused to the customer or a third party by using We do not assume any liability.
4. Sony shall not provide any We do not guarantee the start or continuation of the service.
5. SONY'S LIABILITY TO YOU FOR DAMAGES SHALL BE LIABLE UNDER NO CIRCUMSTANCES Even if there is, the purchase price of this product certified by the customer shall be the upper limit.
6. The licensed software includes software called "PlayStation® BB Navigator" for accessing "PlayStation® BB", but when using various services on "PlayStation® BB" separately from the service provider or copyright holder, Agree to the terms of use or enter into a license agreement Please note that it may be necessary. First of all , please read the terms of use in the "PlayStation®BB" info.

# others

## Article 6 (Cancellation of contract)

1. If you violate any provision of this Agreement, Sony will  
You may cancel this Agreement immediately. customer  
breaches any provision of this Agreement and Sony may terminate this Agreement for you.  
If you send us a contract notice, you  
This Agreement will terminate on the date Sony becomes aware of the violation.  
(hereinafter referred to as the contract end date).

2. If this Agreement is terminated pursuant to the provisions of the preceding paragraph, the customer shall  
You shall stop using the Licensed Software within two weeks from the expiration date .  
increase. In addition, if requested by Sony, the customer may  
to remove the licensed software from this product.  
It shall be sent to the specified location, and Sony will promptly delete it.  
The Product shall be returned to the customer on

## Article 7 (Others)

1. This Agreement shall be governed by the laws of Japan.

2. When the customer takes the licensed software out of Japan and uses it,  
in compliance with applicable national and international export control regulations, laws and orders  
will do. In addition, if the customer installs the licensed software on this product from the Internet,  
The act of downloading must be  
Licensed software is exported outside the United States from Loop's servers and exported to Japan.  
It may fall under the act of importing into the country. licensed software  
Do not include cryptographic technology subject to the U.S. Export Administration Regulations.  
Therefore, you must comply with the provisions of the U.S. Export Administration Regulations and  
Countries where the US government prohibits the export of software (Cuba, Iraq,  
Brazil, Sudan, North Korea, Iran, Syria)  
from Japan to individuals and groups that the United States prohibits transactions  
Please note that it cannot be exported.

3. This Agreement is based on consumer protection laws and regulations, including the Consumer Contract Act.  
It does not change your rights to any disadvantage.

4. Even if some provisions of this agreement are invalid by law,  
All other provisions shall remain in full force and effect.

If there is any doubt regarding matters not stipulated in this Agreement or the interpretation of this Agreement;  
shall be resolved through consultation between the customer and Sony in good faith.  
will do.

## Trademarks

"PSX" and "PlayStation" are registered trademarks  
of Sony Computer Entertainment Inc.  
is. In addition, "DNAS" is a trademark of the company.  
"SONY" is a registered trademark of Sony Corporation.

### • TIFF Software

Copyright © 1988-1997 Sam Leffler  
Copyright © 1991-1997 Silicon Graphics, Inc.

### • libjpeg

This Software is based in part on the work of the  
Independent JPEG Group.

### • libgif

© 1997 Eric S. Raymond



## glossary


### write mode

This is the standard for recording CD-ROMs.

### extension

A string representing the file type. of MP3 files

In this case, put a "." after the file name and add the extension "mp3" . Example) ongaku.mp3



### clip motion

One of the GIF format images that Cyber-shot can handle. one  
Combine multiple GIF format images in a file and flip  
You can display moving images like cartoons.

### packet light

When writing data to a CD-R, the data are called packets.

This is a recording method that divides and writes into units that can be

### bit rate

It is an index that expresses how much information is available in one second. large number

The higher the sound quality, the higher the amount of information per unit time.

becomes.

### multi session

How to write multiple sessions on one CD-R. Truck  
CD-Rs written with Quat Once etc. are multi-session  
will be

### CD-R

A standard for writable CDs. This unit cannot write to a CD-R.

Only photo and music file import is supported.

### DCF

Abbreviation for Design rule for Camera File system . An  
image format for digital cameras.

### Disc at once

This is one method of writing to a CD-R. all data to 1

How to write in degrees. This unit uses this method to write

Only CD-R can be played.

### DVD+RW [D-Vid-Plus R-W]

A standard for rewritable DVDs. Compared to DVD-RW,  
High compatibility with DVD-ROM.

### GIF

It is one of the image file formats. From Ver.1.20 on this unit,  
Images in GIF format can now be played back and imported.

### ID3 tag [ID3 tag ]

Add information such as titles and artist names to MP3 files.

It is a standard for adding

### ISO9660 [ISO9660 ]

A standard for the logical file format of CD-ROMs.

### Joliet

A standard for the logical file format of CD-ROMs.

### MPEG1 [Empeg 1]

One of the video data compression methods. With VHS video quality,  
You can play videos.

### MPEG1 Audio Layer3

An audio compression method used in MP3, standardized in MPEG1.  
Audio standard.

### MPEG2 Audio Layer3

An audio compression method used in MP3, standardized in MPEG2.  
Audio standard.

### MP3 [MP3]

A music format standardized by MPEG

Voice compression standard. Despite the high compression ratio, the treble is close to that of a CD  
quality can be maintained. Created on a computer, etc., on this unit  
Play MP3 files or save to hard disk  
can.

### mp3PRO [MP3 Pro]

An original extension standard for MP3.

### m3u

It is one of the play list file formats.

# others

## “PlayStation BB” [PlayStation BB] Always connected to a broadband network

A platform for a wide range of broadband network services that allows you to connect your PlayStation 2 to your home TV and enjoy it form.

### TIFF

It is one of the image file formats. This unit can be used with a digital camera. You can play saved TIFF files or save them to the hard disk. you can enter.

### VBR

Automatically adjusts the amount of data in a song and saves files without degrading sound quality.

This is a function that keeps the size to a minimum.

### 8.3 Form

A standard that defines the format of file names. For 8.3 format, file The file name must be 8 characters or less, and the extension must be 3 characters or less. set.

## index

### kana

**Update**.....6, 12, 14 Video optimization  
.....19

Sorting order of images .....38

### K

- Keyboard .....40, 41 Clip Motion .....33

difference

Search .....39

Playback .....36, 39 Cyber-shot .....7,  
33 Software.....8, 47

Dubbing.....21 , 32, 45 Chapter  
marks.....18

Import .....7, 35, 40

### Broadcasting in two

languages.....28, 3

teeth

Fast playback .....33

Program Guide.....31, 32 Visualizer.....29

Flash .....38

Playlists ..... 21, 28 Editing.....  
18 , 19 Settings.....17

**Memory Stick** .....7, 46

Recording mode .....20 , 21, 24 Recording reservation  
.....31, 32

---

## alphabet

### C

CD-R.....43

CD-ROM.....6, 14

### D

DVD+RW..... 45

DVD-R ..... 45

DVD-RW ..... 45

DVD bilingual recording sound .....28

DVD menu .....25, 26

### H

HDD bilingual recording audio .....28, 36

### P

PlayStaion®BB ..... 30

### IN

Video mode .....45

+VR mode .....45

VR mode .....45

## Contact information for updates

"PSX" upgrade desk Phone number:  
0120-252-645 (toll-free) Reception hours: Monday-  
Friday 9 :00-20: 00 Saturdays, Sundays, and holidays 9 :00-17: 00

You can also find information about updates on the "PSX" website.

<http://www.sony.co.jp/PSX/>



This manual uses 100% recycled paper and  
VOC (Volatile Organic Compounds) zero vegetable oil ink.